
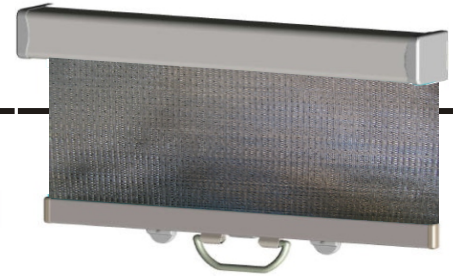


ECONO FROST

CASSETTE UNIT INSTALLATION INSTRUCTIONS

The 9000 series Econofrost cassette for retro-fit is available in linear lengths of 4, 6 & 8 feet. The roll of woven aluminum fabric is designed to cover any standard opening with a fabric length of 78 inches.

The 9000 series units are shipped with all the necessary hooks, screws and hardware for installation found in a separate package within the box.

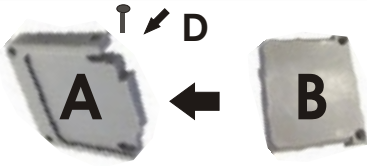

1. Deciding where to mount Econofrost: determine where on the canopy you would like to mount; choose a location that allows for a flush mount (Econofrost units can be mounted on a curved front canopy). Ensure that all units to be installed fit within the end bulkheads.

Ensure refrigerated air curtain, discharge air and return air vents are behind the night cover so cold refrigerated air is not blocked from circulating in the display case. Some older cases have ambient air curtains which must be turned off when cover is in use.

Hold the Econofrost cassette unit up to the location where it will be mounted. Ensure the cover is level before marking the location. Mark the intended position on the mounting surface with a pencil.



2. Installing the mounting brackets: Slide the mounting brackets or “ears” (B) out of the end caps (A).

Line up the mounting bracket “ear” with the location mark on the display case canopy and either pre-drill a hole where required and using a ½” sheet metal screw or using a ½” drill point screw with no pre-drilling required, affix mounting tabs to the display case.



3. Securing the cassette to the mounting hardware: Slide the cassette unit (A) onto the mounting bracket ears (A) and secure by placing a set screw in the holes (D) provided on the nylon end caps.

4. Securing the unit to the bottom of the case: With the 9000 series the Econofrost unit can be secured to the bottom of the case by two options. The first option is the clip on magnets which requires you to just select the distance between each magnet that your customer desires.



The second option is to use the hook. Determine the place at the bottom of case to mount the hook (c) - usually below bumper or molding. Ensure the hook is centered with the handle. Use the hook as a template to mark the holes to be drilled. Drill the holes and mount the hook using sheet metal screws*.

Pull the Econofrost cover down and slip the handle onto the hook.

*Drill point screws (not supplied standard) will eliminate the need to pre-drill holes.