
XL Series Installation Instructions

Specifically for Hussmann Insight Cases

Case Section Layout

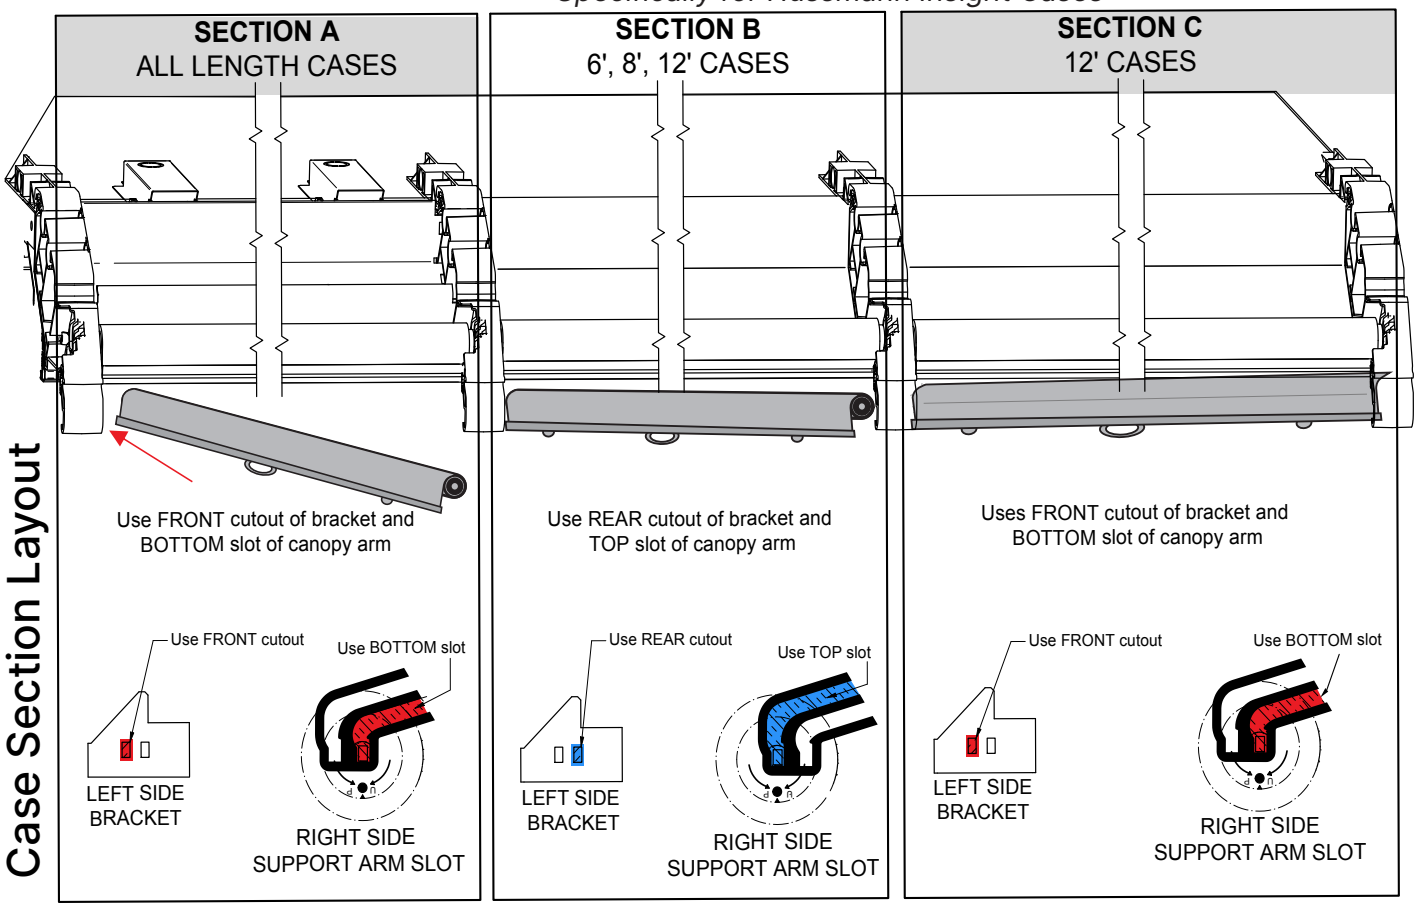


Hussmann Insight cases are designed so that to ensure proper function, the night covers must be installed in the correct alternating sequence as described above. If the night covers are not installed this way, remove & re-install accordingly.

Lighting Rig must be removed before installing.
QR Code for video on pg 2

STEP 1 **Pry off the protective cap before installing.**




! *WHEN INSTALLING:*

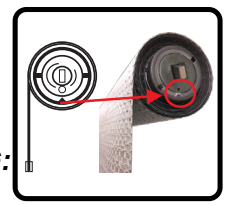


'Dot & Triangle' markings on metal tab-end (right end/spring end) must be at the **BOTTOM**.

STEP 2 **Slide left-end of night cover into metal bracket cutout.**

SECTION A: Use **Front** Cutout
SECTION B: Use **Rear** Cutout
SECTION C: Use **Front** Cutout

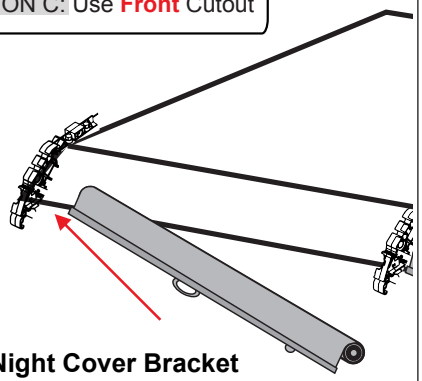


Metal Night Cover Bracket

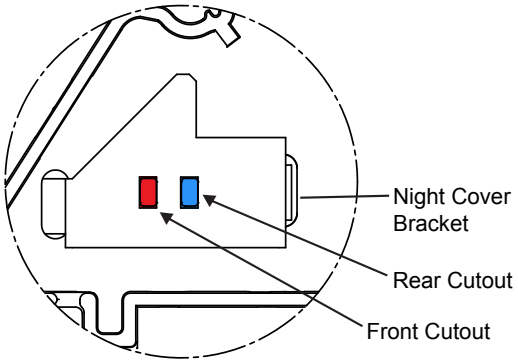


STEP 3 **Slide right-end of night cover into slot on plastic canopy support arm** and click into detent.
Ensure 3/16" of metal pin is firmly in the detent.

SECTION A: Use **Bottom** Slot
SECTION B: Use **Top** Slot
SECTION C: Use **Bottom** Slot

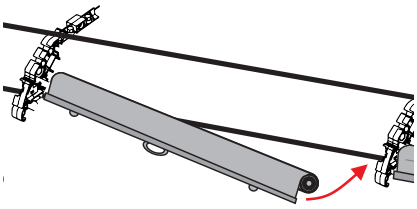


Plastic Night Cover Slots

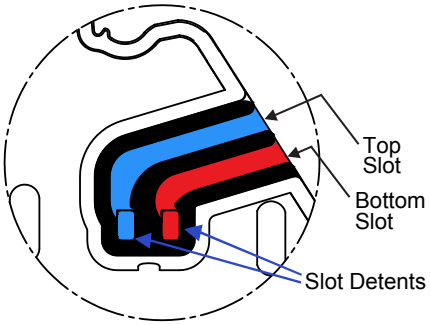

ECONOFROST
NIGHT COVERS FOR OPEN REFRIGERATED CASES

TROUBLESHOOTING

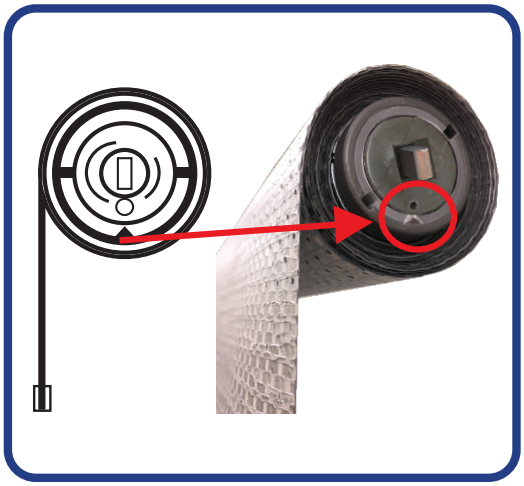

Night cover doesn't roll all the way up

Caused when night cover is installed and the "Dot & Triangle" are not at the **BOTTOM** (this causes spring to lock).

To fix, remove night cover, re-add tension (*See "The spring has no tension" below*) and make sure "Dot & Triangle" are lined up at the **BOTTOM** when installing.

Spring doesn't lock

Night cover must be horizontal when adding tension AND the "Dot & Triangle" markings on the right end must be **at the top** (when adding tension) to allow the spring to lock.



The spring has no tension

Using vise grips or the winding tool, turn the metal tab on the right side at least 14 full turns.

Dot & Triangle must be at the **TOP** when adding/releasing spring tension.

Pin is too short or rounding out canopy arm


Remove night cover from case.

The right end metal tab is adjustable. Using pliers or vise grips, pull the metal pin out to desired length (up to approximately ¼" longer).

If spring tension was lost when removing night cover from the case, re-tension the night cover (*See "The spring has no tension" above*).

Re-install night cover into canopy.



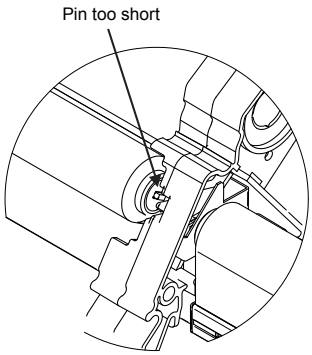

Losing tension or won't pull down

Likely because the night cover is not seated in the correct cutout/slot combination of the Hussman brackets.

Ensure to follow the alternating cutout/slot sequence outlined at the top of page 1 of these installation instructions. The first night cover in the left-most section of the case must be installed into the proper corresponding cutout/slot combination, then all subsequent night covers must alternate cutout/slot combinations.

This prevents interference and ensures proper function across the entire run.

QUESTIONS? **1-800-519-1222**
info@econofrost.com

Installation VIDEO

Specifically for Hussmann Insight Cases

Lighting Rig VIDEO

The LED lighting rig must be removed to properly install any night covers on the Hussmann Insight cases.